



OPERATION:

- CHECK OPERATION WITH CONTINUITY TESTER OR MULTI-METER AT THE TOUCH BAR WITH POWER OFF.

- ① NORMALLY OPEN CONNECTION: (RED & BLUE)
 - TOUCH BAR EXTENDED: INCOMPLETE CIRCUIT
 - TOUCHBAR DEPRESSED: COMPLETE CIRCUIT
- ② NORMALLY CLOSED CONNECTION: (VIOLET & BLUE)
 - TOUCH BAR EXTENDED: COMPLETE CIRCUIT
 - TOUCH BAR DEPRESSED: INCOMPLETE CIRCUIT

FIELD WIRING
(BY OTHERS)

POWER TRANSFER HINGE REQ'D.
(BY OTHERS)

FOR LOCK STILE MACHINING
AND MOUNTING BRACKET LOCATION
SEE DEVICE TEMPLATE

5/8 DIA. INTO DOOR
FOR WIRE FEED THRU

HINGE STILE
MACHINING

5/8

5/8

FOR FASTENERS REQ'D.
SEE DEVICE TEMPLATE

HORIZONTAL \bar{C}
SEE DEVICE TEMPLATE

NOTE:

- CONSULT LOCAL CODES TO
DETERMINE FIELD WIRING

<i>PRECISION HARDWARE INC.</i>	
<small>38100 JAYKAY DRIVE</small>	<small>ROMULUS MI 48174-0040</small>
DEVICE SERIES	
SIGNAL SWITCH	
TEMPLATE NO.	RELEASE DATE
ET-1123-1-B	4-1-97