
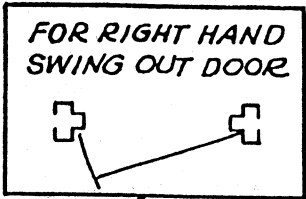


LOCK GUARD - No.1625AR (DIMENSIONS APPROX.) FOR FIELD APPLICATION

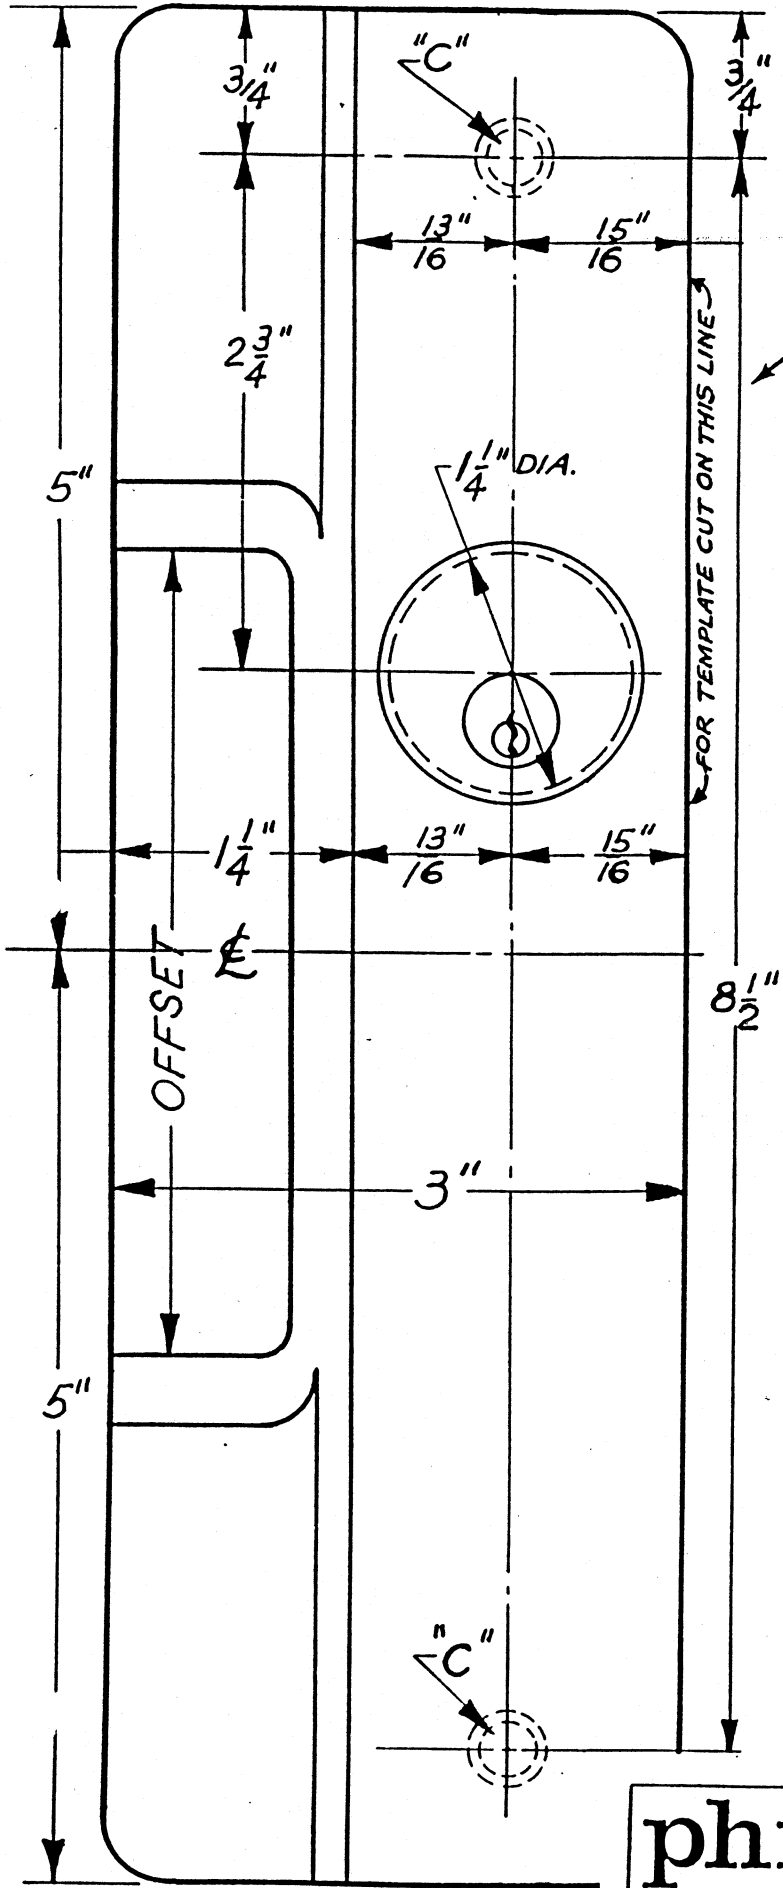

RHRB


No. 1625AR

LOCK GUARD

PATENT PENDING

1. PLACE TEMPLATE ON DOOR WITH CYLINDER CUT-OUT CENTERED OVER CYLINDER HOLE. SECURE TEMPLATE TO DOOR WITH SCOTCH TAPE.
2. MARK TWO SPOTS AT "C".
3. DRILL TWO HOLES THRU DOOR AT "C" USING 9/32" DRILL. ON OUTSIDE OF DOOR, ENLARGE 9/32" HOLE WITH 7/16" DRILL.
4. PLACE LOCK GUARD ON DOOR AND ATTACH WITH MACHINE SCREWS AND TIGHTEN SECURELY. IF NECESSARY, USE SHIM FOR GREATER CLEARANCE AT LIP OF STRIKE.

TYPICAL DOOR AND FRAME DETAIL

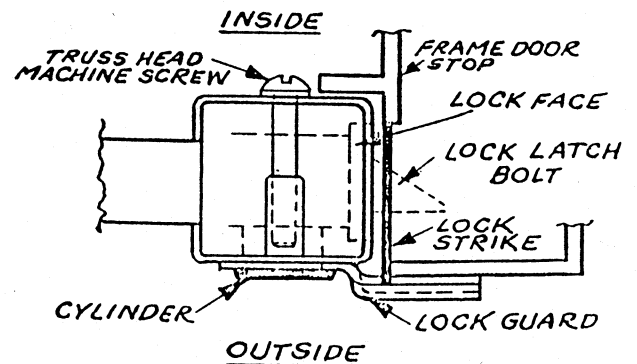

phi

Precision Hardware Inc.

P.O. BOX 74040, ROMULUS, MI 48174-0040