LOCK GUARD - No. 1625 AR (DIMENSIONS APPROX.) FOR FIELD APPLICATION

LHRB

No. 1625 AR

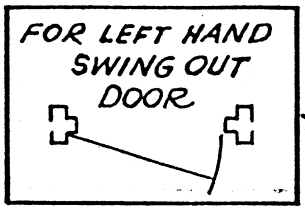

LOCK GUARD
PATENT PENDING

1. PLACE TEMPLATE ON DOOR WITH CYLINDER CUT-OUT CENTERED OVER CYLINDER HOLE. SECURE TEMPLATE TO DOOR WITH SCOTCH TAPE.
2. MARK TWO SPOTS AT "C".
3. DRILL TWO HOLES THRU DOOR AT "C" USING 9/32" DRILL. ON OUTSIDE OF DOOR, ENLARGE 9/32" HOLE WITH 7/16" DRILL.
4. PLACE LOCK GUARD ON DOOR AND ATTACH WITH MACHINE SCREWS AND TIGHTEN SECURELY. IF NECESSARY, USE SHIM FOR GREATER CLEARANCE AT LIP OF STRIKE.

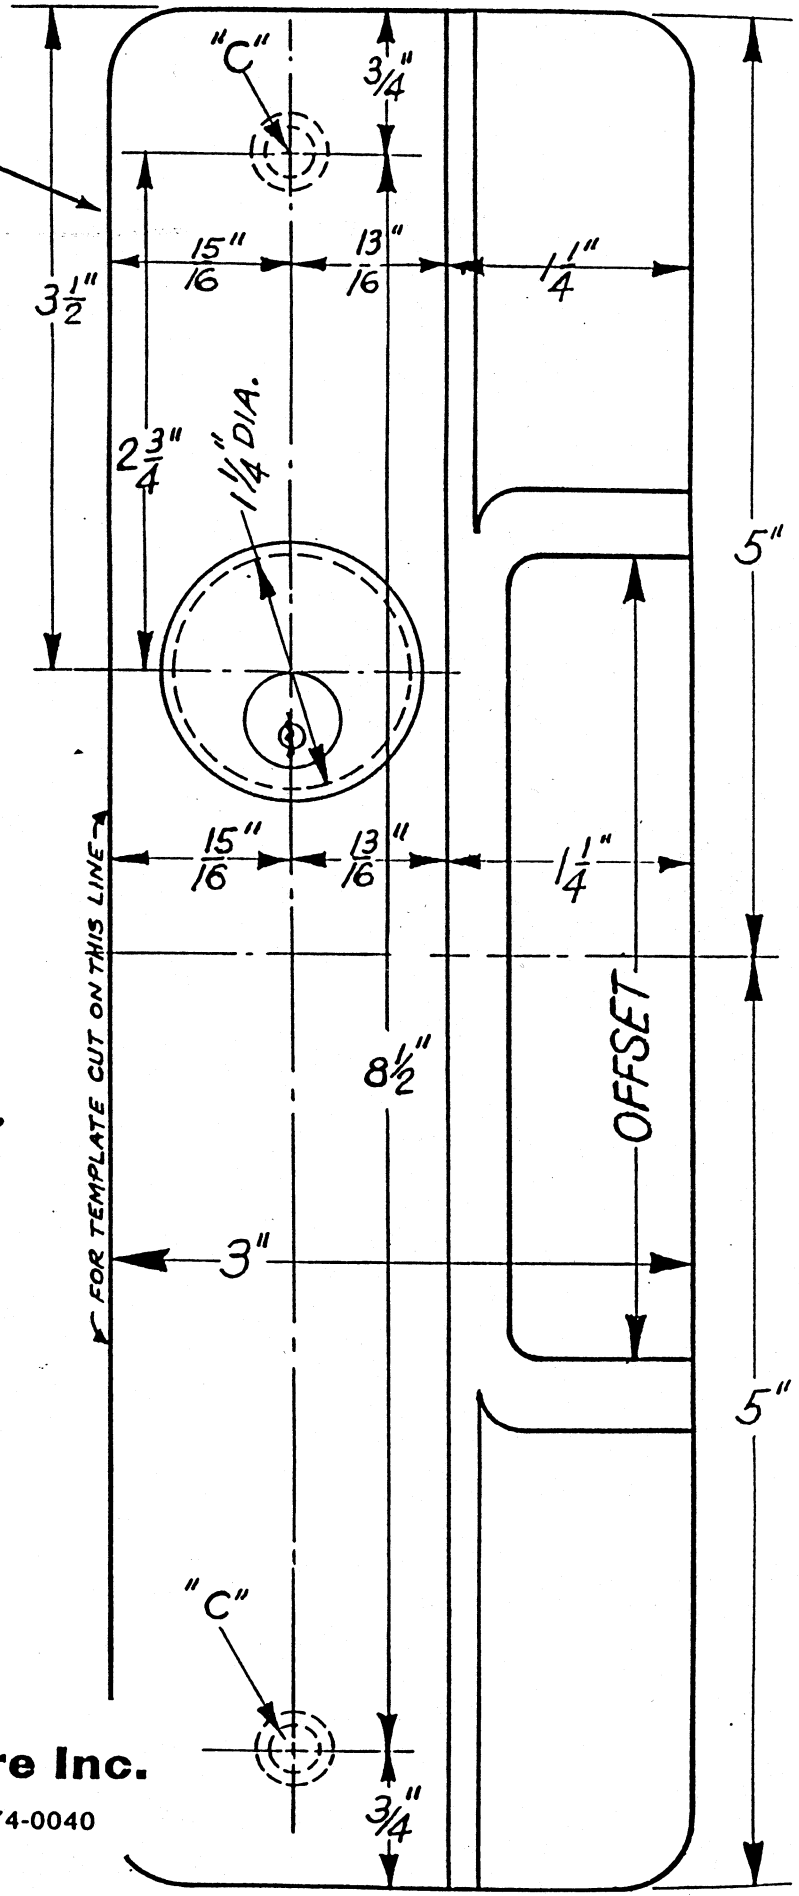

TYPICAL DOOR AND FRAME DETAIL

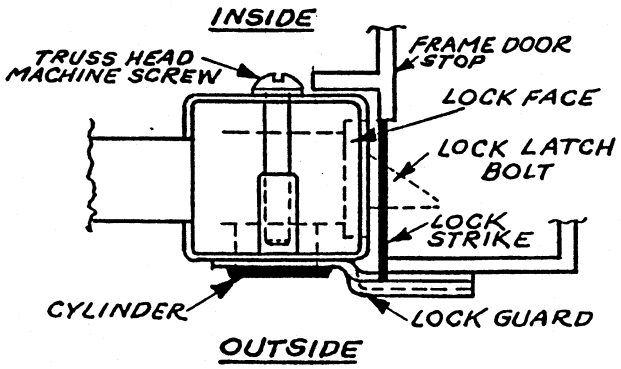

phi
Precision Hardware Inc.
P.O. BOX 74040, ROMULUS, MI 48174-0040